


**2100 Series Wave Rack
Below Grade Mounting
Instructions**

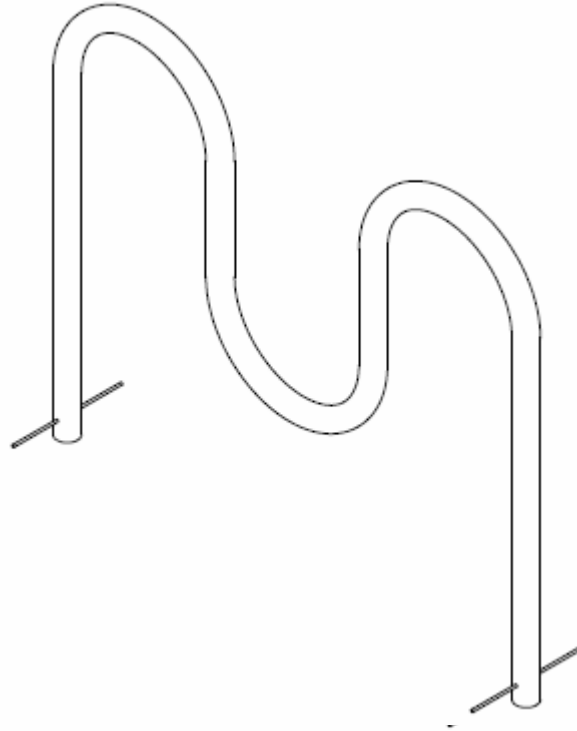

A. Below Grade Mount

- Determine desired location and dig mounting holes 17" below grade.
- Fill hole 1/3 full with gravel.
- Lower unit into holes and fill remainder of hole with cement.
- Support unit with spacers, such as cinder blocks, until cement sets.

