


6800 Wave Series
Below Grade Installation

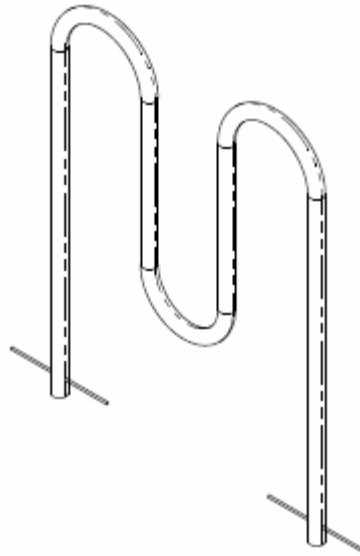

Below Grade Mount:

- Determine desired location and dig mounting holes 17" below grade.
- Fill hole 1/3 full with gravel.
- Lower unit into holes and fill remainder of hole with cement.
- Support unit with spacers, such as cinder blocks, until cement sets.

Below Grade Illustration

